

## Left

Mic Lines	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
○ ○																							

Yamaha Mic-Amp In								TL Audio Mic-Amp In				SPL In		FocIn	DTC In									
1	2	3	4	5	6	7	8	1	2	3	4	1	2		L	R								
○ ○																								

1		2		888 A Out				1		2		888 B Out				1		2		888 C Out				1		2		3		4		5		6		7		8	
○ ○																																							

LF		RF		LB		RB		C		LFE		HP 1		HP 2						TSR In		RDS	Tape In		MD In			
												L	R	L	R					L	R	In	L	R	L	R	L	R
○ ○																												

## Right

Yamaha Mic-Amp Out								TL Audio Mic-Amp Out				SPL Out		Foc	TSR Out		RDS	Tape Out		MD Out											
1	2	3	4	5	6	7	8	1	2	3	4	1	2	Out	L	R	Out	L	R	L	R	L	R								
○ ○																															

888 A In								888 B In				5				1				2		3		888 C In				1		2		3		4		5		6		7		8	
○ ○																																											

DVD		DVD		DVD		DVD stereo		FOSTEX																					
LF	RF	LB	RB	C	LFE	L	R	3	4	5	6	7	8	9	10	11	12	13	14	15	16								
○ ○																													

								Listen		FOSTEX																					
								Mic	IN	3	4	5	6	7	8	9	10	11	12	13	14	15	16								
○ ○																															